






Date : 2005-07-12

Step 3) "UTMA/UTSA Device Overview" for Remote OfficeStation Connection

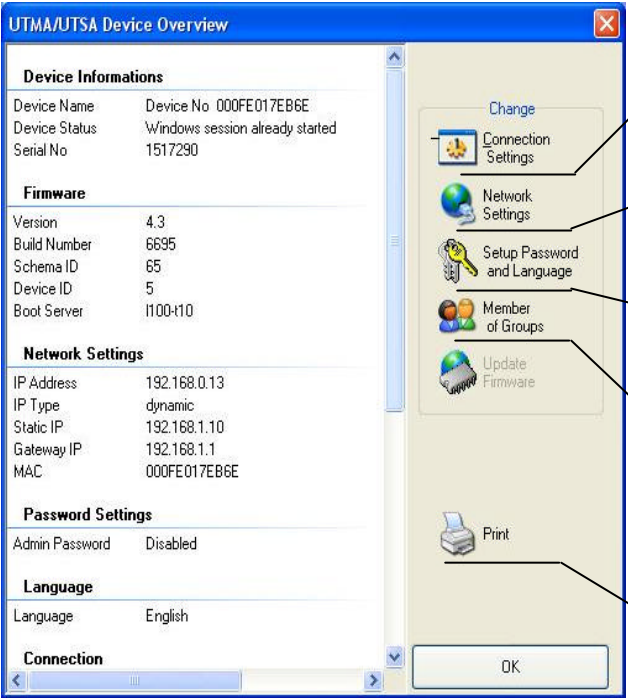



Connections Setting : OfficeStation setup-Same item as TS option setup and can change the settings for the Host PC to be connected. (Remote OfficeStation Connection Include Auto Connection)

Network Setting : UTMA/UTSA setup-Same item as Network and can change

Setup Password and Language : OfficeStation setup-Same item as Password and Language and can change the setting values of password and language for OfficeStation.

Member of Groups : Shows groups currently set up. Groups to which OfficeStation are assigned can be added or deleted.

Print : Can print the content of setup window shown on the screen.

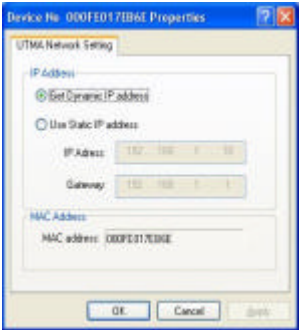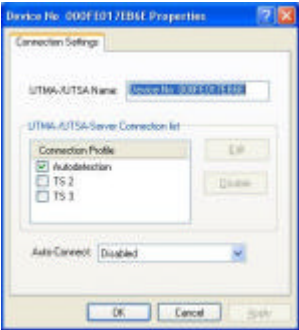

- Note -

OfficeStation information (Connections Setting, Network Setting, Setup Password and Language) changed in the "UTMA/UTSA Device Setup" menu will be applicable OfficeStation after is rebooted.



Date : 2005-07-12

- Auto Connection Function

With the Auto Connection function, you can easily connect to a Host PC(s) without using the OfficeStaion main setup screer..

### Introducing the Auto connection setup

Step 1) Turn -On Your OfficeStaion Device

Step 2) The OfficeStaion Main setup Screen will briefly display



Step 3) Next, you will automatically go into the Windows Logon Dialog box Screen without having to pres the connect button



Step 4) Fill in the User name and Password



Date : 2005-07-12


### Note

Setting up your Auto Connection menu from OfficeStation main setup

Step 1) Click "Setup" to setup your Auto Connection menu


Step 2) Click "TS Options"

Step 3) Select "TS -2" then click "Enable/Disable"

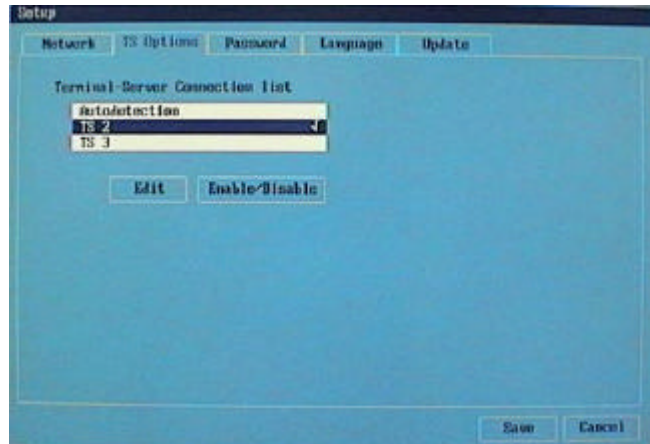

Note) You must Disable the Autodetection selection.

Step 4) Click "Edit" to select the Option menu

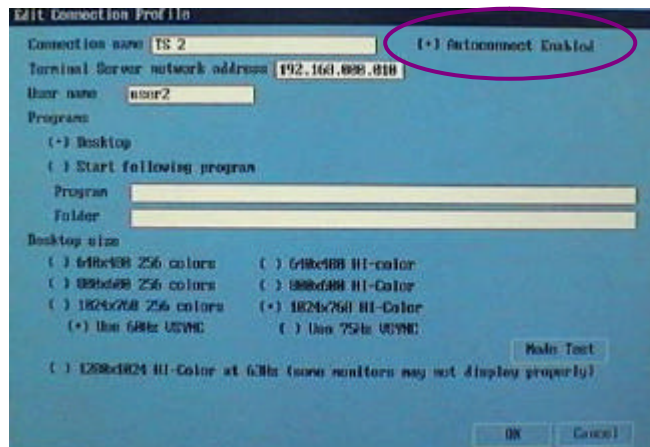



Date : 2005-07-12

Step 5) Click “Autoconnect Enabled”

Step 6) Click “OK” to save all settings.


### Setting up your Auto Connection menu from NCT-2000-XP Console

Step 1) Click “Hardware settings(LAN/Local)” menu from NCT-200-XP Console

Step 2) Click “UTMA/UTSA device” setup menu

Step 3) Select the target OfficeStation devices then Double click


Step 4) Click “Connection Setting” to connection settings

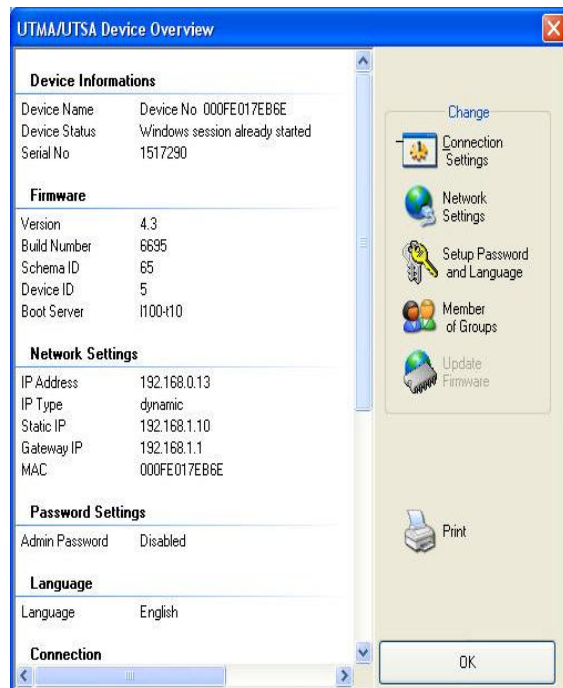




Date : 2005-07-12

Step 5) Click “TS 2” Connection Profile.

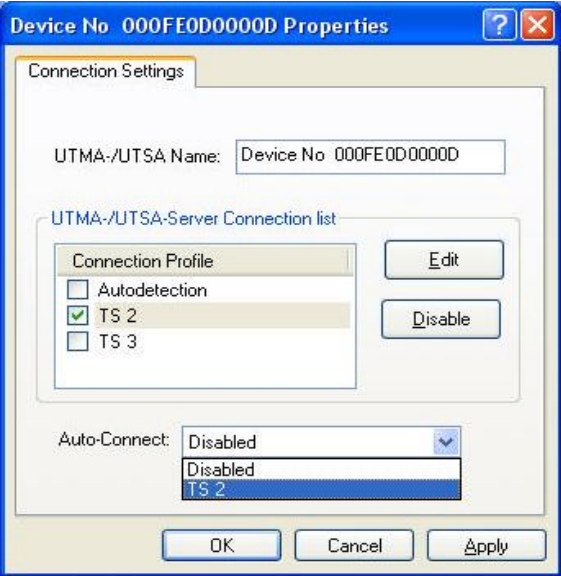

Note) You must Disable the Autodetection selection.

Step 6) Click “OK” to save all settings.

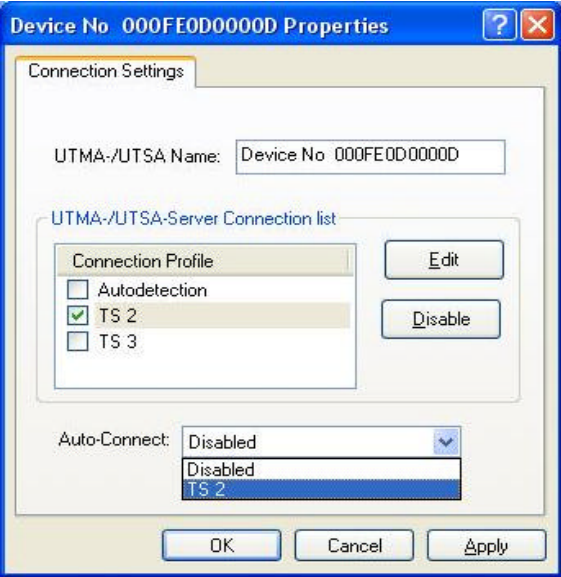



Date : 2005-07-12

- Auto Logon Function

With the Auto Logon function, you can easily connect to a Host PC(s) without fill in the Windows Logon Dialog box



Refer) Automatically go in to the Windows main screen from Windows Logo Dialog box.

Introducing the Auto Logon setup

Setting up your Auto Logon menu from NCT-2000-XP Console

Step 1) Click “Hardware settings(LAN/Local)” menu from NCT-200-XP Console

Step 2) Click “UTMA/UTSA device” setup menu

Step 3) Select target OfficeStation devices then Double click

Step 4) Click “Connection Setting” to connection settings

Step 5) Select Connection Profile(Autodetection, TS 2, TS 3)


Step 6) Click “Edit” from Connection Profile

Step 7) Click “Enable Autologon Mode”

Step 8) Fill in the User name and Password

Step 9) Click “OK” to save all settings.

Step 10) Click “OK” button from “Connection Settings”

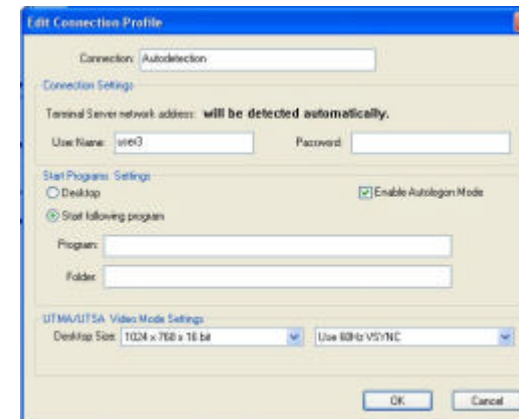

**- Note -**

You can use Auto Logon and Auto Connection function together.



Date : 2005-07-12

- USB Device Assignment(s)

The USB port in the Host PC can be set to use USB storage devices connected to the Host PC in each OfficeStation. When a USB storage device is connected, the USB storage devices connected to each port is shown on the screen. Change the settings by clicking the applicable port for each USB storage device connected that is to be used in the OfficeStation or applicable Host PC.

The setting window appears when the applicable port is clicked as shown in the figure to the right.

The Default setting is “Use the default prevention setting from the system settings”. This setting is not allowed to be used for the Host PC and OfficeStation. To use USB storage device in the Host PC and OfficeStation, deselect default setting and click OfficeStation or main console(refers to Host PC)


**- Note -**

USB -Device Assignments only supports USB type storage device. It does not support USB keyboard or other devices.

Introducing the USB Port Assignment(s) setup

Setting up the USB Port Assignment(s) from the NCT-2000-XP Console

- Step 1) Click “Hardware settings(LAN/Local)” menu from the NCT-2000-XP Console
- Step 2) Click “USB device Assignment(s)” setup menu
- Step 3) Click “ROOT hub” then select the appropriate port
- Step 4) Click “Use default prevent setting from system settings” then select “UTMA MAC Address” to share the USB Port Assignment(s)
- Step 5) Click “Apply” button

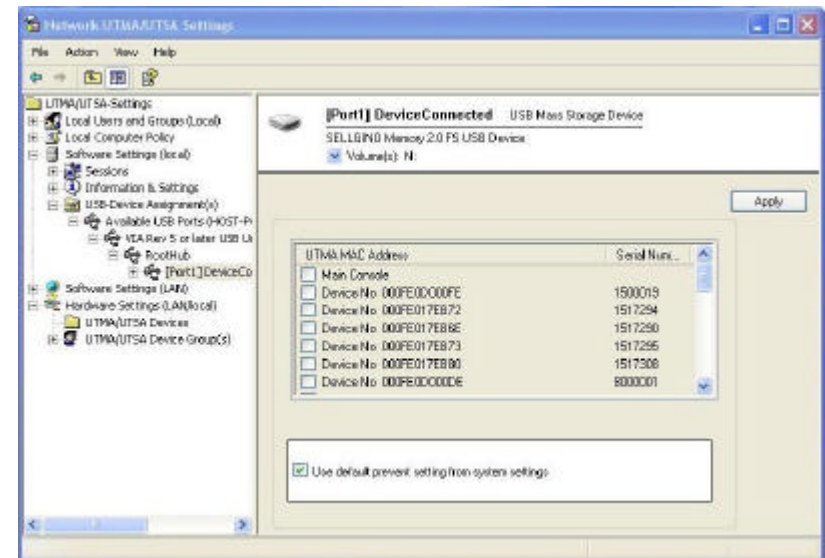





Date : 2005-07-12


- View Screen and Management Function

Through the console you can view the screen of the OfficeStation selected. Users must have Admin authority to activate this function.

Introducing the View Screen setup

Setting up your View Screen menu from the NCT-2000-XP Console

- Step 1) Click “Hardware Settings(LAN/Local)” menu from NCT-200-XP Console
- Step 2) Click “Software Settings(Local)”
- Step 3) Click “Sessions” then select the target session
- Step 4) Click “View Screen” for Monitoring OfficeStation(s)  
(Or click “View icon (View )” from console menu bar)

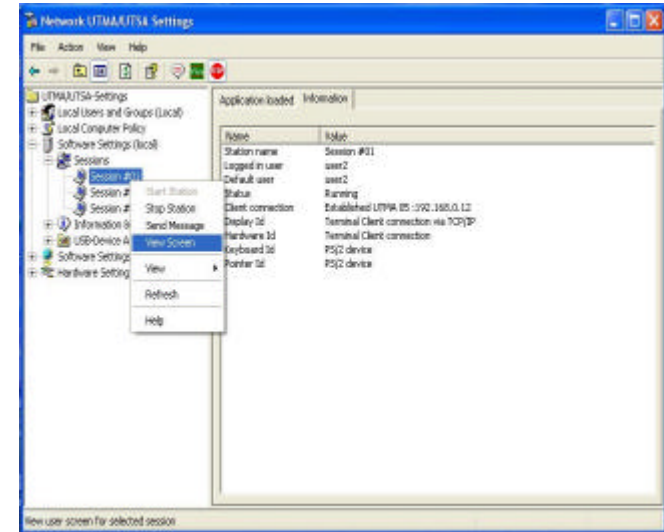

- OfficeStation(s) Management

Introducing Management setup

- Step 1) Click the Session bar then Click the right mouse button from the Viewer screen
- Step 2) Click “Controlled By TS Admin” to control OfficeStation screen  
(User Input Allowed menu is used to allow the OfficeStation user to control the main screen)

**Note**

Depending on the model, your OfficeStation’s functions may look slightly different than those from this NCT-2000-XP manual.

